



- 1-1. PLACARD BATTEN
- 1-2. APRON STAGE LIGHT BATTEN
- 1-19. NO.04 UPPER SOUND REFLECTION BOARD
- 1-3. SET BATTEN (∓. CONTOUR CURTAIN)
- 1-10. DRAW CURTAIN
- 1-4. LIGHT BATTEN
- 1-5. SET BATTEN
- 1-18. SET BATTEN (∓. MANUAL BATTEN)
- 1-6. NO.01 UPPER SOUND REFLECTION BOARD
- 1-5. SET BATTEN
- 1-10. DRAW CURTAIN
- 1-11. FRONT SCREEN
- 1-4. LIGHT BATTEN
- 1-18. SET BATTEN (∓. MANUAL BATTEN)
- 1-5. SET BATTEN
- 1-7. NO.02 UPPER SOUND REFLECTION BOARD
- 1-5. SET BATTEN
- 1-18. SET BATTEN (∓. MANUAL BATTEN)
- 1-10. DRAW CURTAIN
- 1-5. SET BATTEN
- 1-4. LIGHT BATTEN
- 1-5. SET BATTEN
- 1-18. SET BATTEN (∓. MANUAL BATTEN)
- 1-5. SET BATTEN
- 1-8. NO.03 UPPER SOUND REFLECTION BOARD
- 1-5. SET BATTEN
- 1-10. DRAW CURTAIN
- 1-6. NO.05 UPPER SOUND REFLECTION BOARD
- 1-12. UPPER HORIZONTAL LIGHT BATTEN
- 1-18. SET BATTEN (∓. MANUAL BATTEN)
- 1-5. SET BATTEN
- 1-10. DRAW CURTAIN
- 1-13. HORIZONTAL CURTAIN

백은아트홀

무대장치
단면배치도

1 / 100 (A1)

2021.01.

HI-002

공연장 무대장치 단면배치도
축척 : 1/100